

Introduction to Display system

(Item quantity and type installed in bus may vary)



Front Display



Display Controller
EMBDC




Rear / Side Display



Display Controller
IBDC



Inbus Display

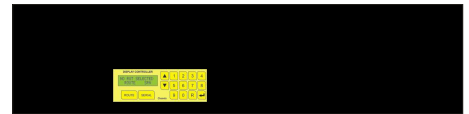

Display with built-in Controller
(Controller on back side of the display)

General Failures and Possible Solutions

1. All Displays and Controller not getting ON

Please check display power switch on dashboard of the bus.
Even after switching ON the power switch displays are not ON,
Please check fuse of the bus.



2. Any one Displays or Controller not getting ON

Please check power connector for that particular display or controller



Power connector

3. All Displays and Controller getting ON, but routes not getting transferred

Please check communication connector of controller and display



Communication connector

4. Route getting transferred in Front, but not transferred in other displays

Please check communication connector of Front display and other displays