

- To Set New Route Press “**RUT**” Key.



```
ROUTE SR NO
NXT      SET  EXT
```

- Press “**NXT**” Key.



```
ROUTE SR NO
NXT 0      SET  EXT
```

- For Example: For Route Sr. No. **42**, Press “**▲**” Key four times for digit “**4**”.




```
ROUTE SR NO
NXT 4      SET  EXT
```

- Now press “**NXT**” Key for next digit.



```
ROUTE SR NO
NXT 40     SET  EXT
```

- Now Press “**▲**” Key two times for digit “**2**”.

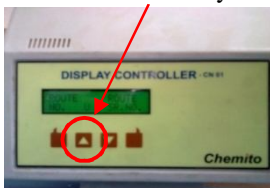

```
ROUTE SR NO
NXT 42     SET  EXT
```

- To Confirm Route No. Press “**▼ SET**” Key.



```
0042 VASHI RLY STN
RST      SET  EXT
```

- Press “**▼ SET**” To Transfer Route to Display Board.



```
0042 VASHI RLY STN
SENDING RUT .....
```