

Instruction Manual for IBDC Route Selection

Chemito Infotech
Pvt. Ltd.

Plot Number 30, Panvel Co-op Ind. Estate,
Opp Amar Dham, Mumbai Pune Highway.

Panvel (W) 41 0 2 0 6

Phone : 022 27482459.


Toll Free Phone : 1800 1234355

Email : service@chemito.net Web : www.chemito.net


Chemito

Format No: CS/BDS/MNL/004 Rev 1.0


- Press **F3 (SERIAL)** or **F4 (ROUTE)** for selecting a destination by **Serial** or **Route** number.

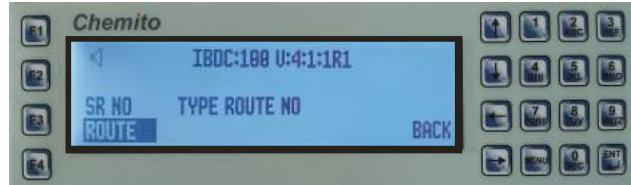


- Enter your desired Route Number with the help of numeric keypad, and press **ENT key**.

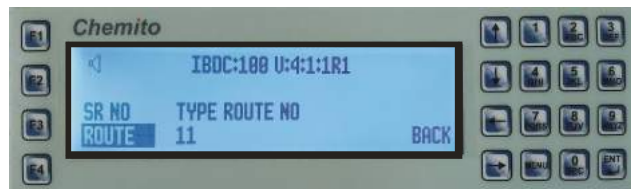

- List of Routes assigned to a particular route number will be shown on screen.

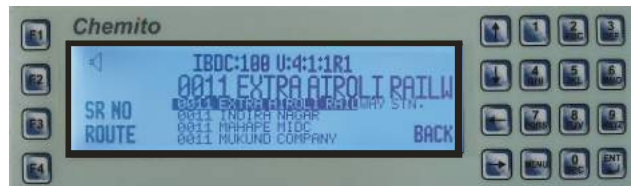

- Scroll **UP** and **DOWN** the list using **↑** and **↓** Keys

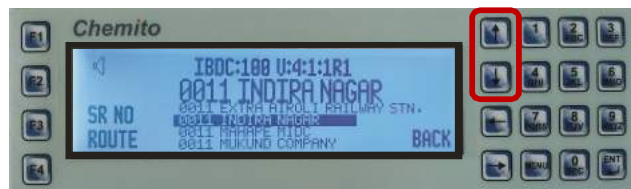

- Press **ENT key** selecting desired destination and selected route will be shown on IBDC screen and on LED display boards.